


DEFEND-R CI VP-SA WRB
TPO/WRB TIE-IN
DEFEND-R CI WOOD COMPOSITE
CONTINUOUS POLYISO INSULATION
DEFEND-R CI VP-SA WRB
VAPOR PERMEABLE, SELF ADHERING AND WATER RESISTIVE BARRIER


INSTALLATION STEPS:

- 1: APPLY APPROPRIATE ROOF MEMBRANE BONDING ADHESIVE OVER SUBSTRATE AND CONTINUE IT ONTO PREVIOUSLY INSTALLED HUNTER XCI VP-SA WRB 2" (51mm) AND ALLOW IT TO FLASH OFF ACCORDING TO SPECIFIC ADHESIVE INSTALLATION INSTRUCTIONS.
- 2: INSTALL EPDM/TPO ROOF MEMBRANE, EXTENDING IT A MINIMUM OF 3" (76mm) OVER THE PREVIOUSLY INSTALLED HUNTER XCI VP-SA WRB. CUT ROOF MEMBRANE AS STRAIGHT AS POSSIBLE TO HELP WITH ALIGNMENT OF TERMINATION BAR. ROLL OVERLAP WITH 2" HAND ROLLER TO ENSURE FULL ADHESION. ENSURE THE LAST 1" (26mm) OF THE ROOF MEMBRANE IS NOT ADHERED TO ALLOW APPLICATION OF WATER CUT-OFF MASTIC HIGHLIGHTED IN STEP 3.
- 3: APPLY A CONTINUOUS BEAD OF WATER CUT-OFF MASTIC A MINIMUM OF 1/2" (13mm) IN DIAMETER BETWEEN THE FACE OF THE VP-SA WRB AND UNDERSIDE OF THE SINGLE-PLY ROOF MEMBRANE. MASTIC SHALL BE APPLIED DIRECTLY IN LINE WITH PLANNED TERMINATION BAR LOCATION.
- 4: WHILE MASTIC IS STILL WET, INSTALL TERMINATION BAR OVER SINGLE-PLY MEMBRANE, SANDWICHING THE MASTIC BETWEEN THE ROOF MEMBRANE AND THE VP-SA WRB. TERMINATION BAR SHALL BE FASTENED WITH APPROVED FASTENERS SPACED A MINIMUM OF 12" (305mm) ON CENTER. FASTENERS SHALL PENETRATE THROUGH THE BEAD OF WATER CUT-OFF MASTIC TO ENSURE A WATER AND AIR TIGHT SEAL.

N.T.S.



SUBJECT TO CHANGE WITHOUT NOTICE

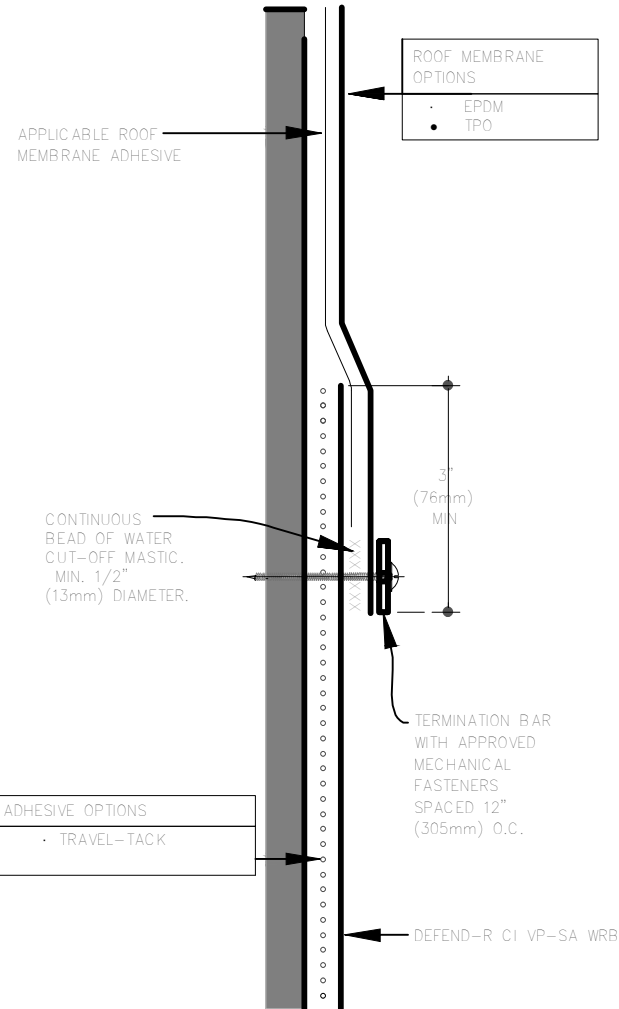

DISCLAIMER: DETAIL SHOWN FOR ILLUSTRATION PURPOSES ONLY. ACTUAL PROJECT DETAIL MAY VARY