
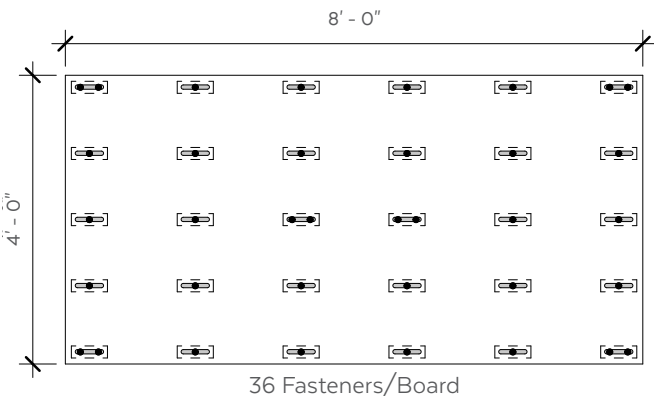
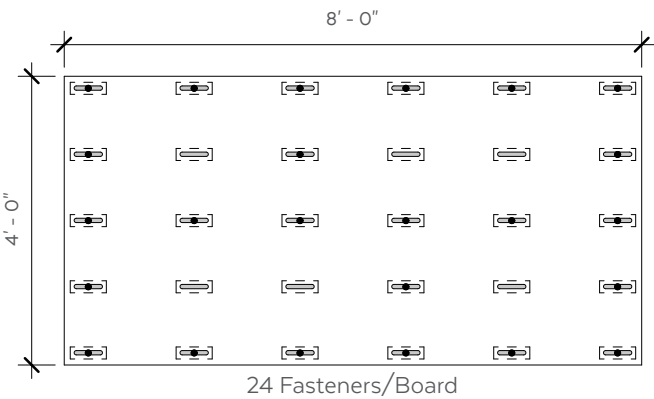
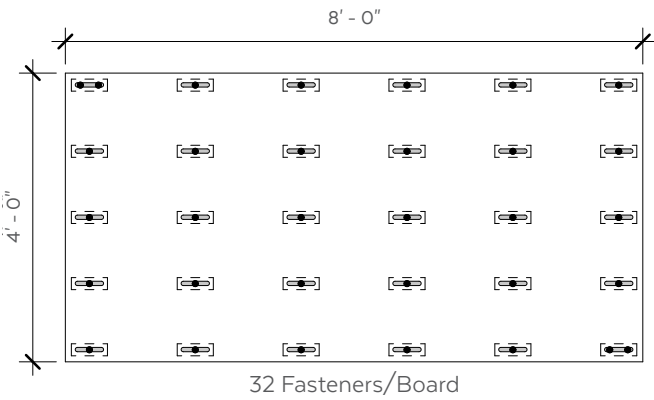
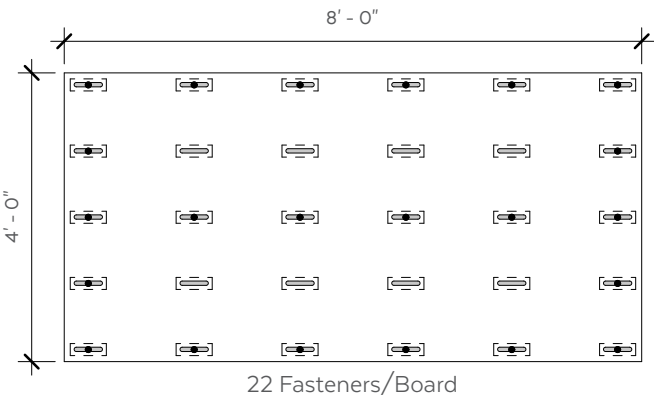
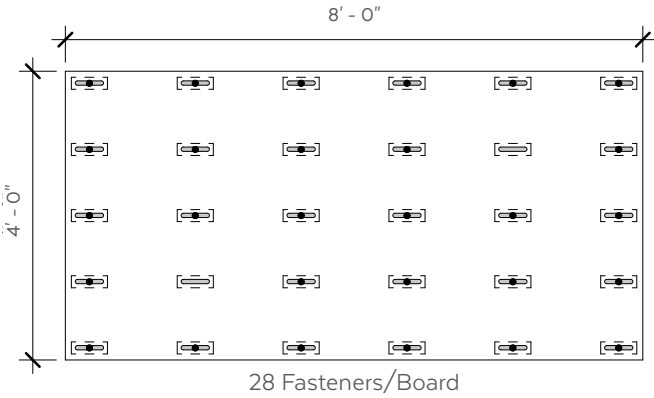


DEFEND-R VENT FASTENING PATTERNS

WOOD, STEEL, OR STRUCTURAL CONCRETE ROOF DECKS

NOTES

1. Please refer to DrJ TER 2101-01 for required number of fasteners per 4' x 8' nailable insulation panel. Where fastening pattern quantities differ from quantities in DrJ TER 2101-01, use pattern with the next highest fastener quantity.
2. Defend-R Vent panels have painted markings on the substrate to indicate block locations. Fasteners need to be installed within 1" of this marked area. On steel decks be sure to fasten into the top flute.
3. See the Defend-R Vent Installation Guide for Defend-R Vent orientation in regards to steel deck flute direction.

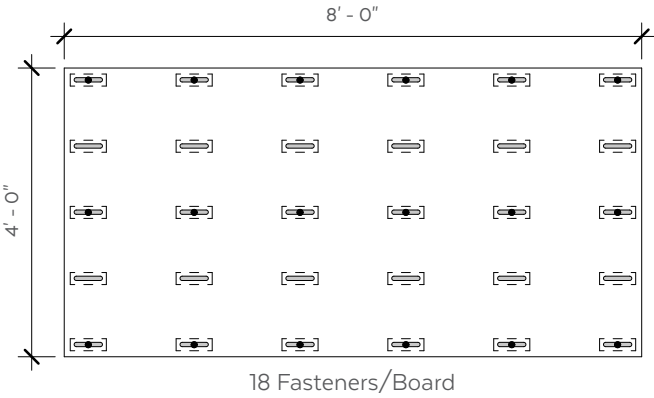

DEFEND-R VENT FASTENING PATTERNS

