
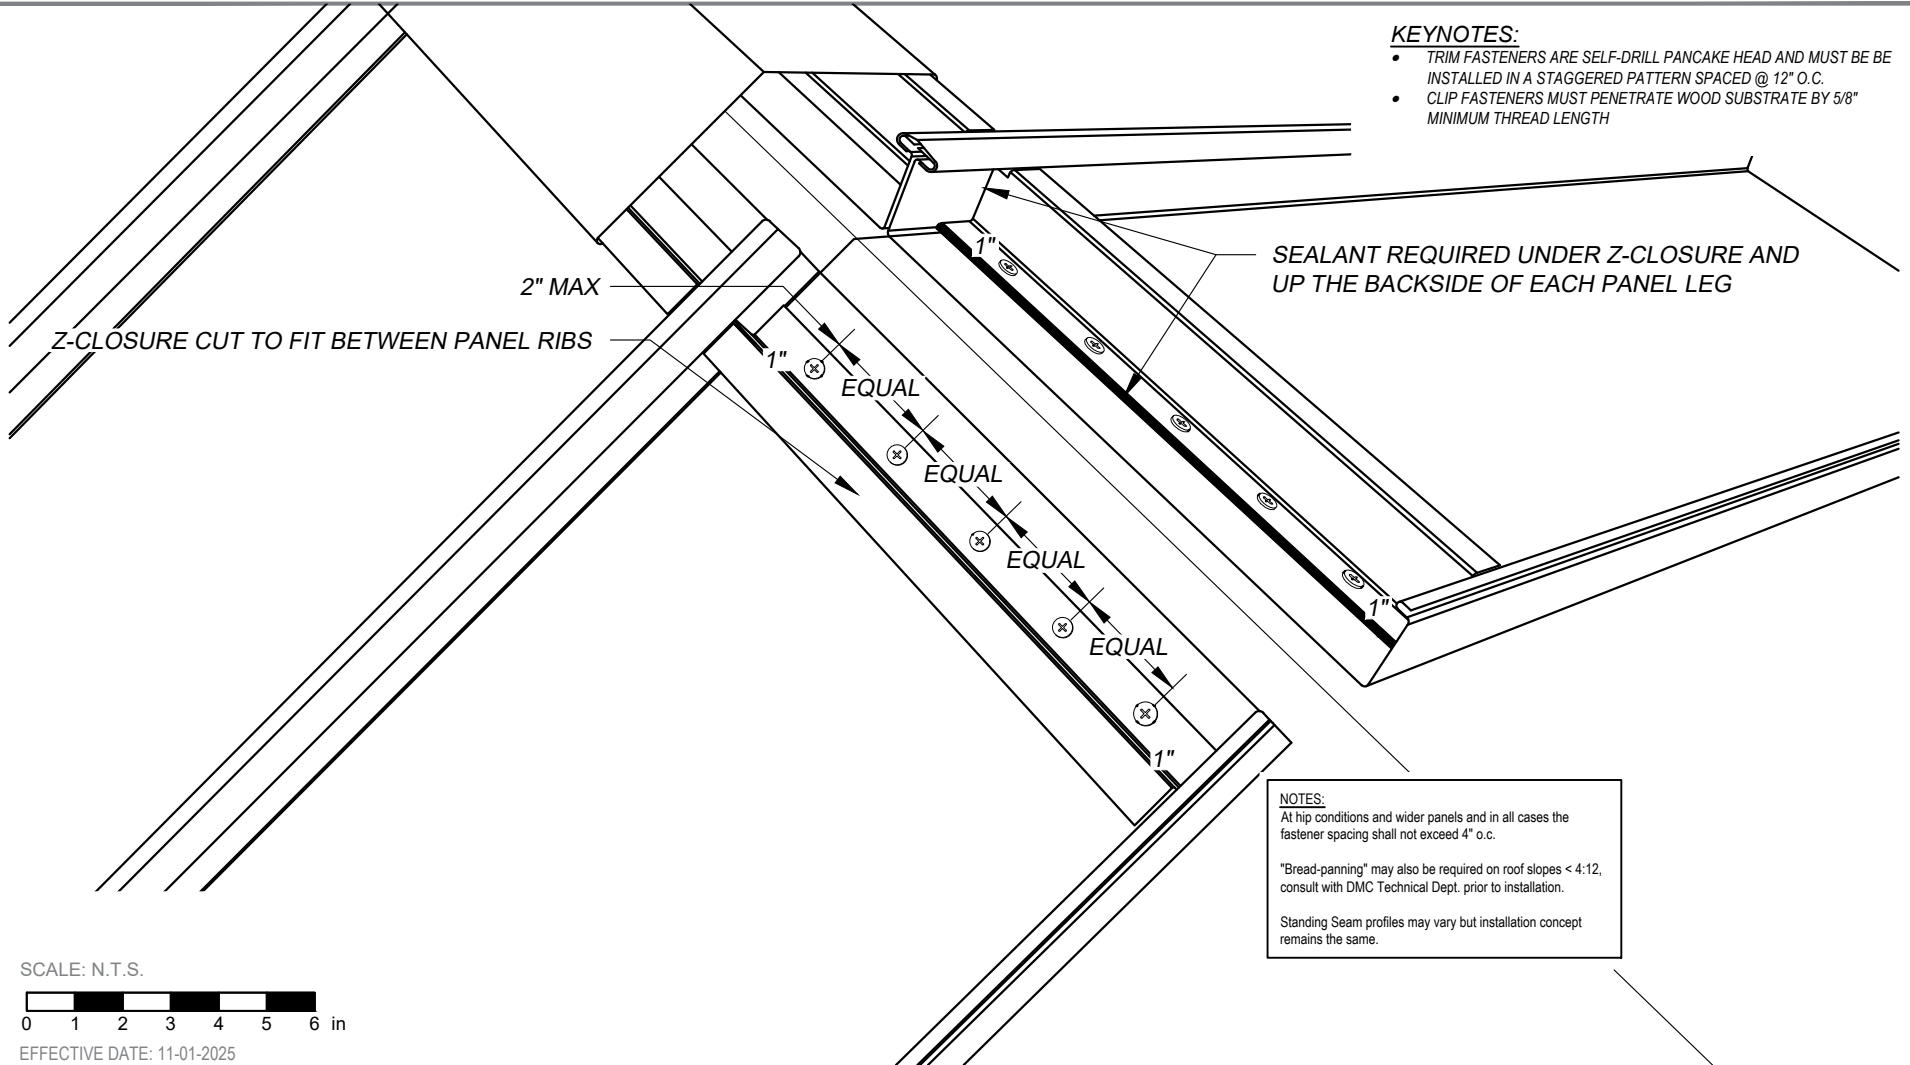


DMC 250T - WOOD SUBSTRATE DETAILS
Z-CLOSURE DETAIL

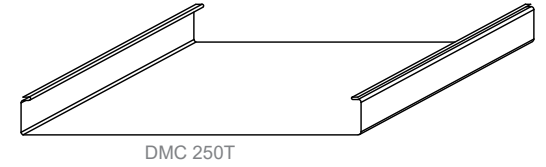


KEYNOTES:

- TRIM FASTENERS ARE SELF-DRILL PANCAKE HEAD AND MUST BE BE INSTALLED IN A STAGGERED PATTERN SPACED @ 12" O.C.
- CLIP FASTENERS MUST PENETRATE WOOD SUBSTRATE BY 5/8" MINIMUM THREAD LENGTH

SEALANT REQUIRED UNDER Z-CLOSURE AND UP THE BACKSIDE OF EACH PANEL LEG

NOTES:
At hip conditions and wider panels and in all cases the fastener spacing shall not exceed 4" o.c.
"Bread-panning" may also be required on roof slopes < 4:12, consult with DMC Technical Dept. prior to installation.
Standing Seam profiles may vary but installation concept remains the same.

SCALE: N.T.S.



EFFECTIVE DATE: 11-01-2025
SUBJECT TO CHANGE WITHOUT NOTICE

DISCLAIMER: DETAIL SHOWN FOR ILLUSTRATION PURPOSES ONLY. ACTUAL PROJECT DETAIL MAY VARY